



Fiskars First Scissors, 3005

Blunt point scissors with safe edges and easy to hold handles, make this is an ideal first scissors for youngsters learning to cut.



Mini-Easi-Grip Scissors, 3006

Help developing hands use a scissors with these high quality, blunt tipped loop scissors. The blades open automatically after each cut.



Learning Scissors, 3027 (right-handed) 3026 (left-handed)

The tiniest scissors for first time cutters. The rounded tip blade is sharp enough to easily cut paper, but won't cut fingers.



Squishgrip Scissors, 3029

A pointed tip scissors with extra soft handle to reduce fatigue on little hands.



Adapt-A-Cut, 3028

A revolutionary new way to cut for students who have problems with a "regular" scissor. The handle adapts with Velcro for extra support, a crossbar for horizontal support and "pushing" rather than grasping. The blade is safely inside the tool. Can be used with the Adapt-A-Hold, Item 3051 (not included).



MAPED Koopy Kids Scissors, 3053

This scissors opens automatically with spring action for assisted cutting. May be used normally by unclipping the spring. Assorted colors.



Softgrip Scissors, 3056

A 5 inch long, sharp tip scissors with an extra soft handle to reduce fatigue on little hands.